

## Use and care

**To refill:** peel back black rubber cap; fill approx 3/4 full (1/4 liquid soap and 1/2 water). For best performance allow soap to fully dissolve in the water.

**To change head:** depress the white lever and slide attachment toward the base of the brush. To attach, align the guides and push forward until it locks.

**To clean:** retract refill cap and flush with warm water, pump the mechanism until no soap appears. Not recommended for the dishwasher.